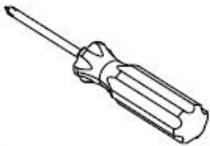
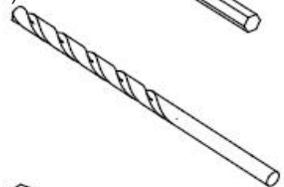
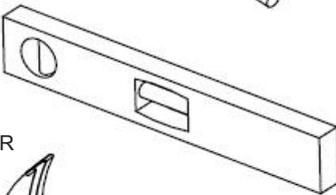
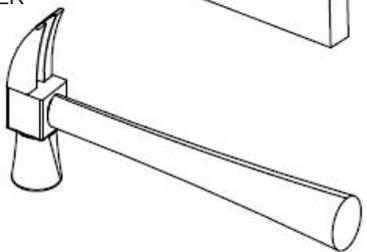
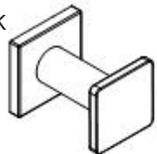


ITEMS INCLUDED		TOOLS REQUIRED	
DRY WALL ANCHOR	 X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR	 X 2	PEN / PENCIL	
#8 SCREW	 X 2	1/4" (6 mm) DRILL	
MOUNTING BRACKET	 X 1	LEVEL SET	
M6X1 SET SCREW	 X 1	HAMMER	
3MM HEX KEY	 X 1		
SINGLE ROBE HOOK	 X 1		

GNG - 5310
EN-2927

DYAD

INSTALLATION INSTRUCTIONS

5310


SINGLE ROBE HOOK

GINGER
Luxury For Your Lifestyle™


2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.GINGERCO.COM

REV -

① REMOVE MOUNTING BRACKET

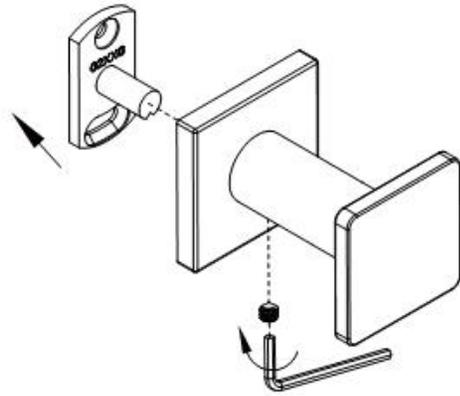


② ALIGN MOUNTING BRACKET AND MARK LOCATION

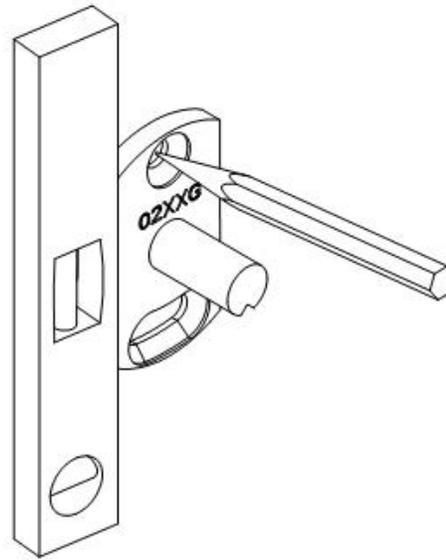

③ DRY WALL INSTALLATION

DO NOT DRILL


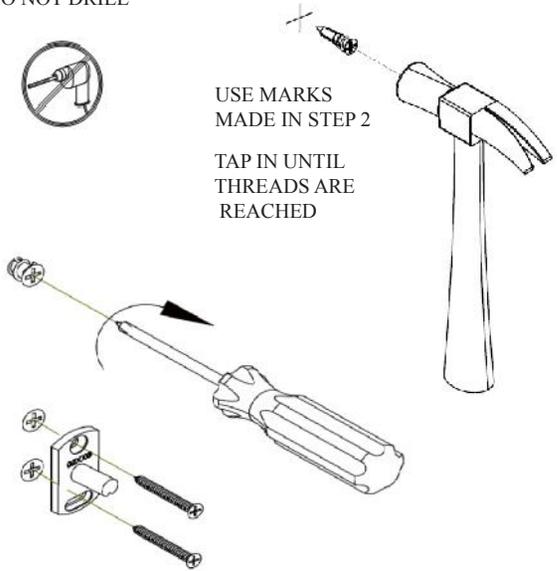


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)


INSERT TILE ANCHOR

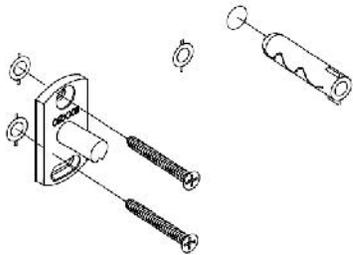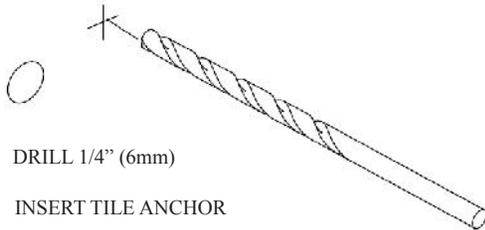

⑤ INSTALL PRODUCT ONTO BRACKET

ENSURE MOUNTING BRACKET IS INSTALLED VERTICAL

ROSETTE

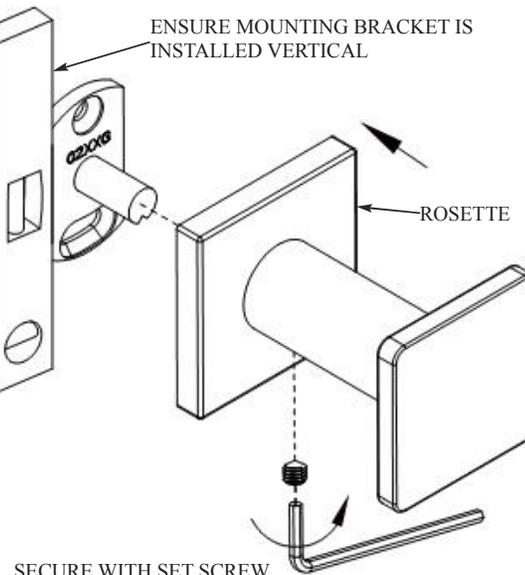

SECURE WITH SET SCREW